





Tower crane safety ground installation manual

1 installation steps The following picture

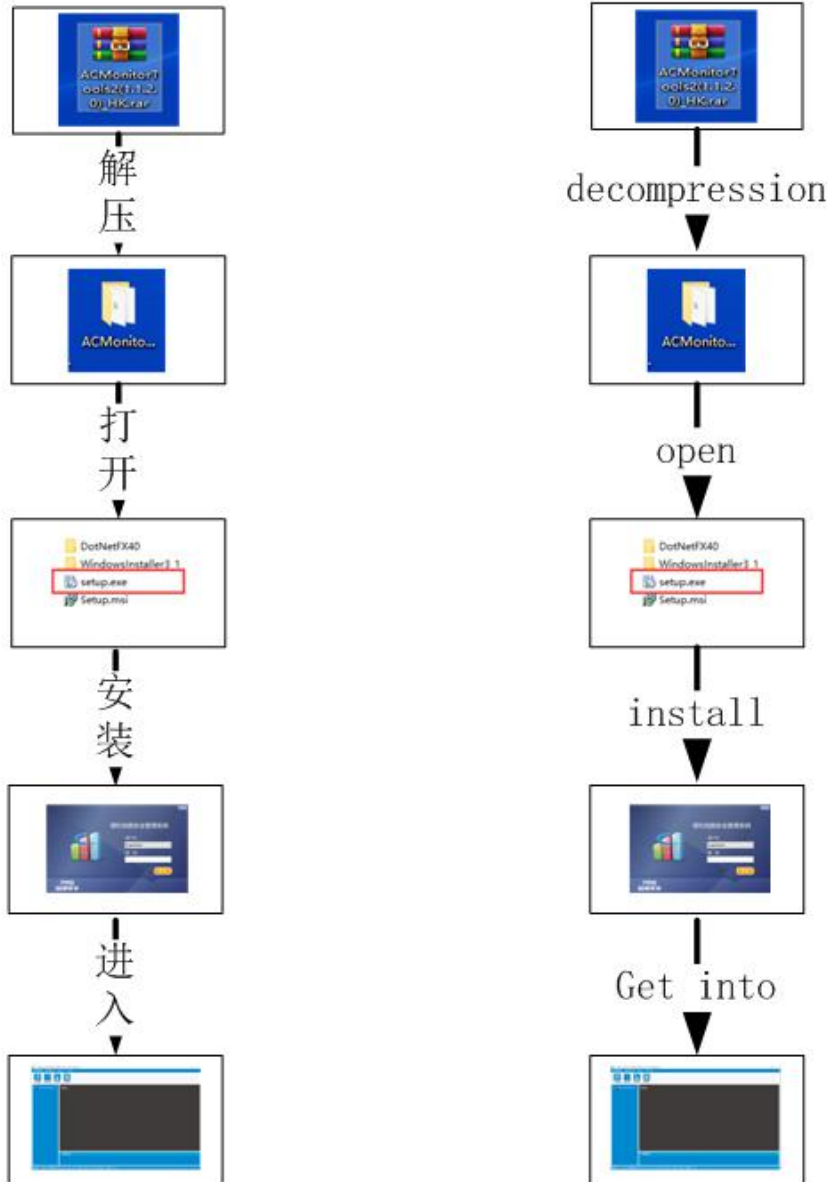

During installation, Need to calculate the registration code, Send the machine code to the technician.

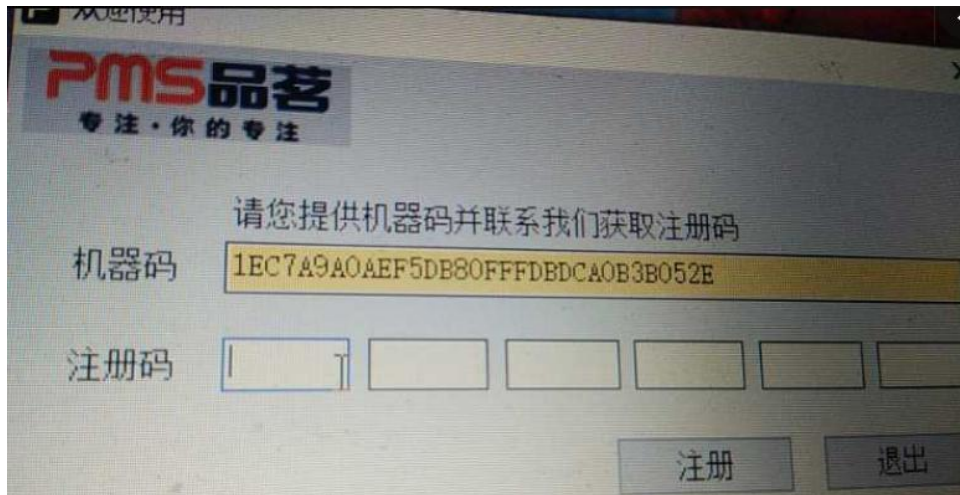


2 Software use

2.1 enter the system,password:fosowsystem




2.2 change language,The following picture,Click on the red box option,After entering 'English'.The software must be restarted after switching languages

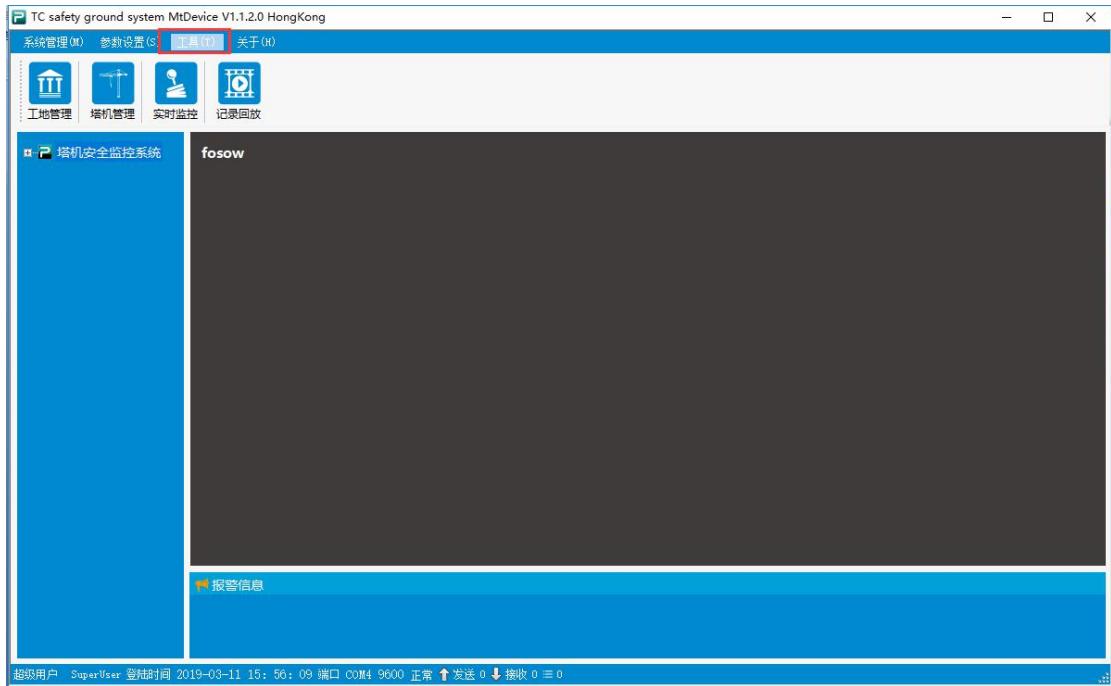

2.3 System settings


2.3.1 Port setting: select 'setting' → Port setting (The following picture)

Baud rate setting: 38400, Other settings as shown below.

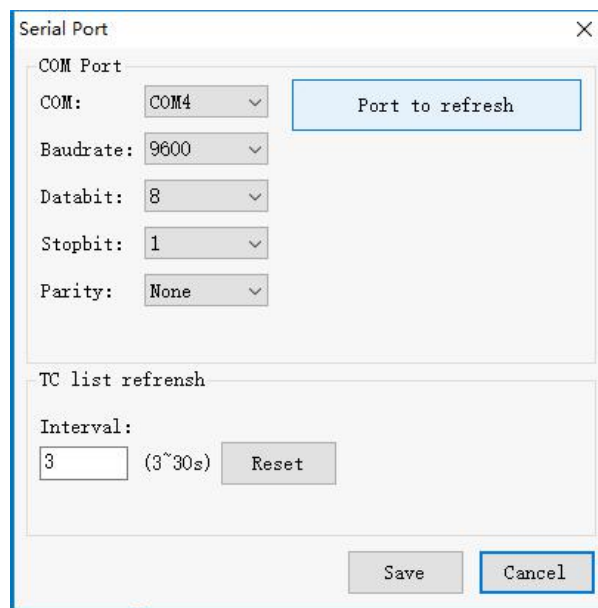


2.3.2 wireless setting: Click 'setting' → wireless


As shown below, the red frame position, The setting is consistent with the tower crane. Read the parameters of wireless communication first (读取参数), Set again.

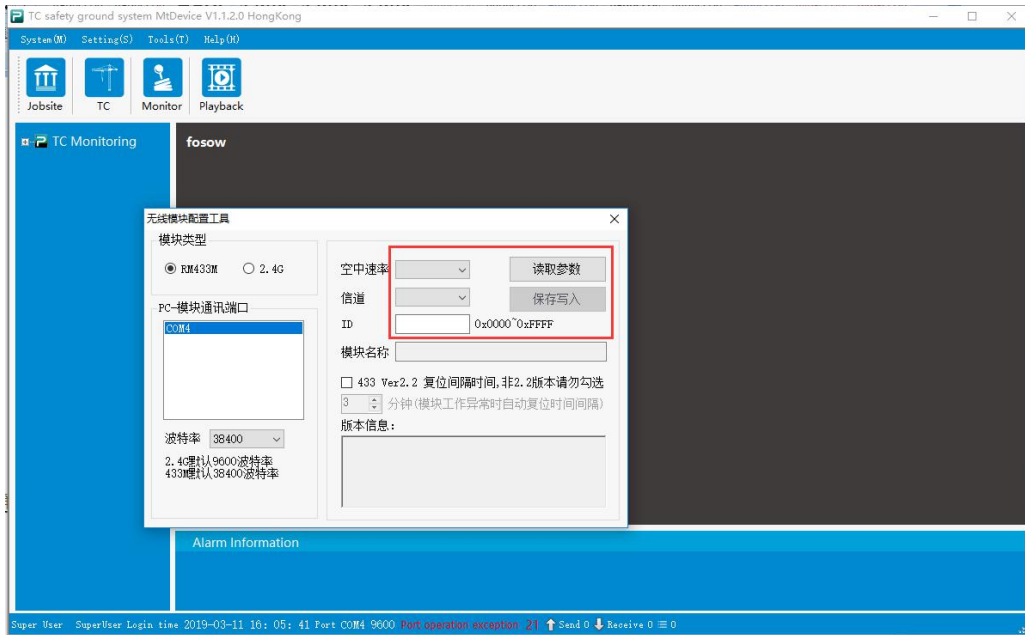


2.3.3 Set jobsite information Click 'jobsite setting' → 'add'
 Add content according to jobsite information, Module parameters are just records, Can record each site communication information.

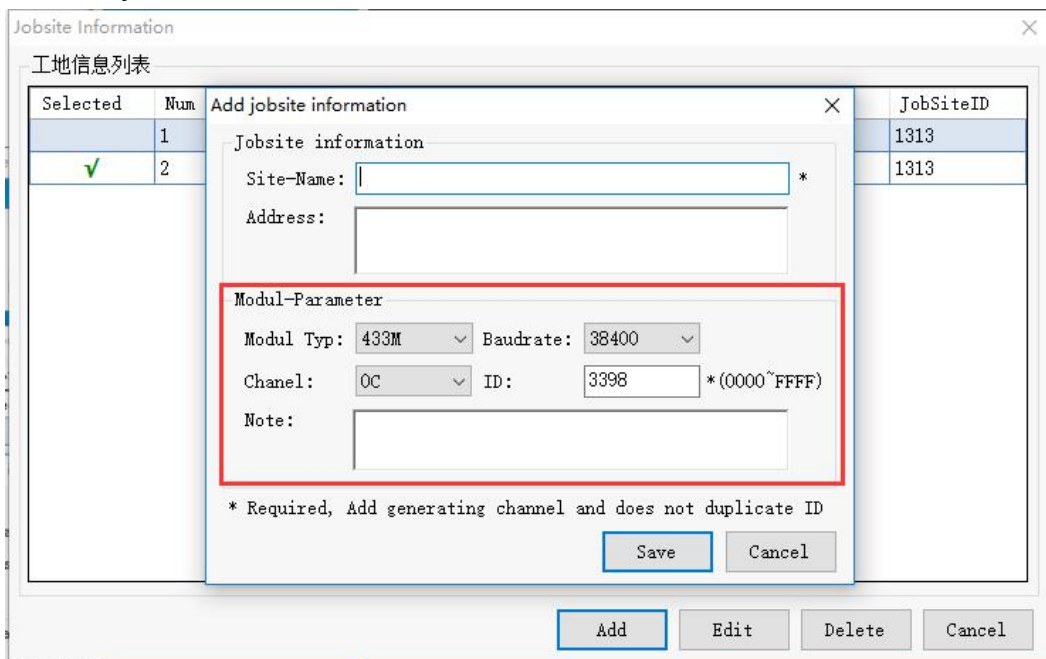

2.3.4 add device Click 'TC' → 'add' → Input device number → 'obtain SN'
 'obtains statcpa'

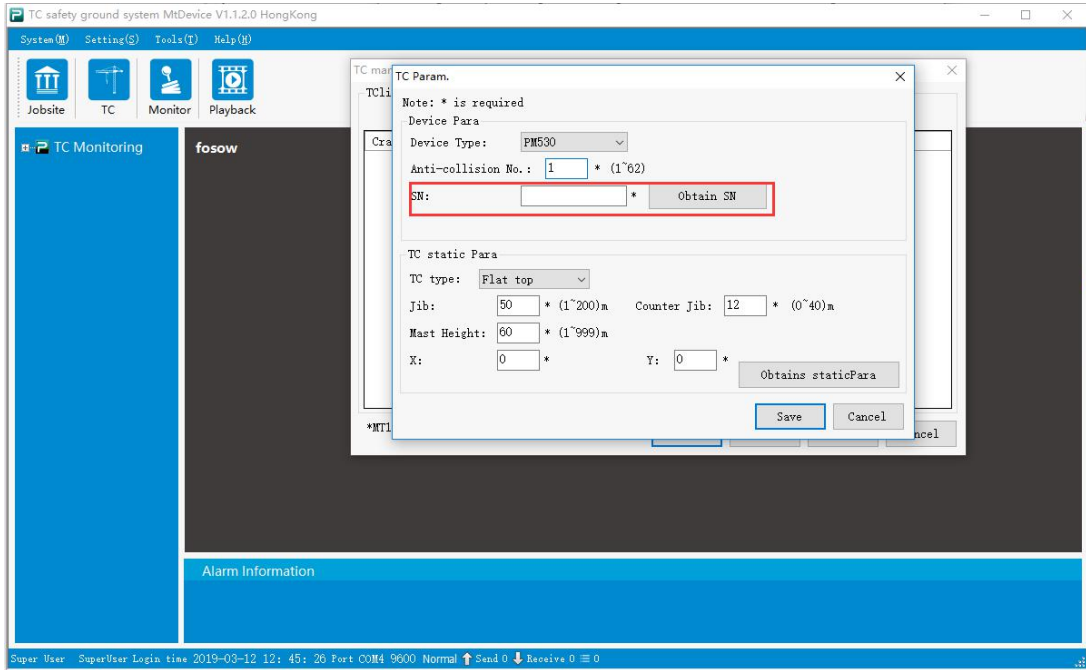

2.3.5 Work interface introduction

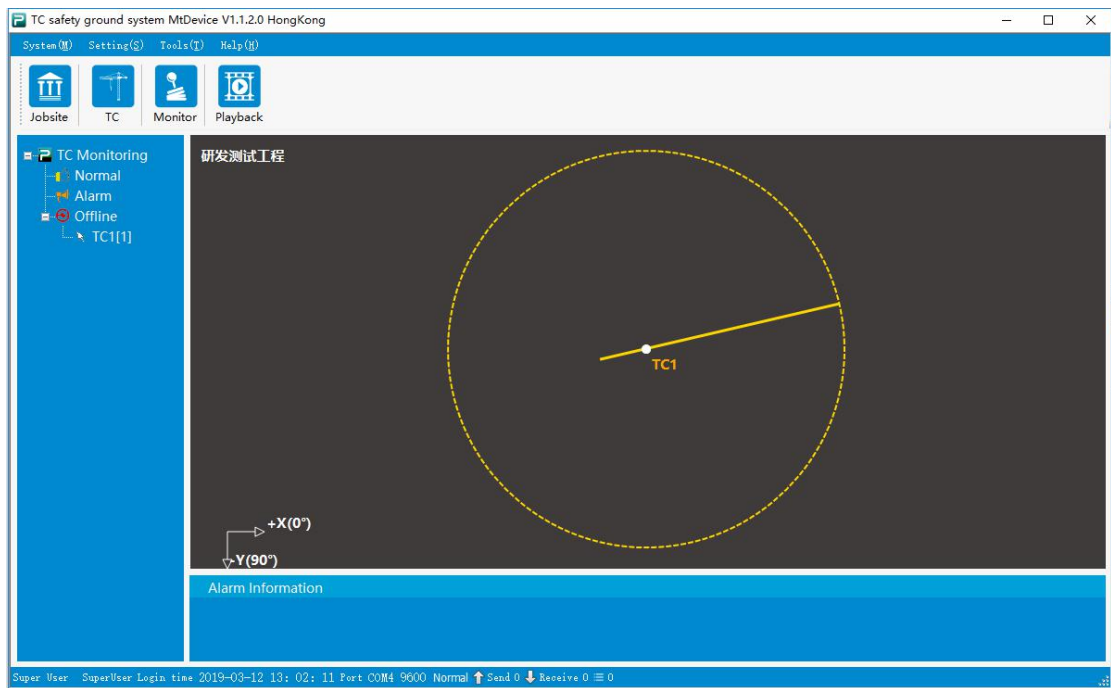

System:Used to add new users,

Setting:Set wireless communication module parameters,Port selection

Tool : Used to set the language

Monitor: Display current communication status

Playback: Local video playback